

Limited Warranty

1. Hair Spa is subject to a one year limited warranty. If your Hair Spa malfunctions within 1 year from the date of purchase due to defects in materials and workmanship it may be covered by this limited warranty, subject to certain exclusions set forth below, and the Distributor's sole discretion. The Distributor reserves the right to reject any claim for any reason or no reason.

(a) In the event of malfunction, please fill out the Limited Warranty certificate below and return the Hair Spa to the original place of purchase along with the completed Limited Warranty form.

2. Limited Warranty coverage exclusions: This limited warranty excludes malfunction arising from the following:

(a) Damage caused by misuse, abuse, or use in contravention of the terms set forth in this manual.

(b) Damage caused by alterations, modifications, customisation or any authorised attachments to the device.

(c) Damage caused by accidents or carelessness (ex. dropping)

(d) Damage caused by fire, earthquake, flood and or any other natural disasters.

(e) Any type of damage occurring after one year from the date of purchase, by which the Limited Warranty period has expired.

3. If the device is not returned to the original place of purchase or if the device was purchased online, the customer is responsible for any costs arising from shipping the defective device in accordance with any instructions received from customer service and or the original place of purchase.

4. This Limited Warranty cannot be reprinted, reproduced, altered or copied. Please store it in a safe place. Unauthorised reprinting, reproduction, alteration, and or copy will void this Limited Warranty.

HAIR SPA LIMITED WARRANTY

Product	Hair Spa Waterproof Scalp Massager				
Purchased	Year	Month	Date	Warranty Period	ONE (1) YEAR FROM THE DATE OF PURCHASE
Store	Place of purchase: _____				
	Address: _____				
	City: _____		State/Province: _____		
	Zip/Postal Code: _____		Tel: _____		
Purchaser	Full Name: _____				
	Place of purchase: _____				
	Address: _____				
	City: _____		State/Province: _____		
	Zip/Postal Code: _____		Tel: _____		
Email: _____					

Questions or Concerns? Please contact Customer Service on 01273 774 977 or via email at info@trendco.co.uk

Distributed by:
Aderans UK Ltd. (t/a Trendco),
Sheridan House, 114-116 Western Road, Hove, BN3 1DD

MADE IN CHINA



16LAS12056 0406 | E310745



 
Instruction Manual

Thank you for purchasing Hair Spa. For your safety, please read this instruction manual carefully before using the product, and keep it in a safe place for future reference.

INSIDE THIS PACKAGE

• Main Unit x1

• Charging Base x1

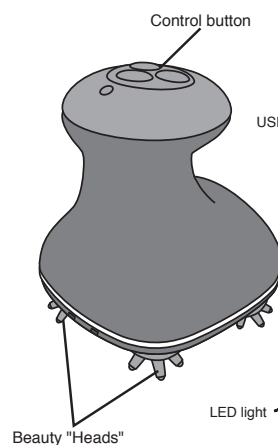

• Power Adapter x1

• USB Cable x1

• User Manual

PRODUCT SPECIFICATIONS


Size	100x90x118 mm	Power	Input :100~240V, 50/60Hz, 0.3A
Weight	About 280g	Waterproof Rating	IPX7
Material	ABS resin, Silicon resin, etc.	Manufactured In	China

PRECAUTIONS

- Please ensure that the legs and the USB are clean at all times before use. If the device is dirty, please use a soft cloth or Q-tip for cleaning.
- If the device has not been used for a while, please check if it works properly.

HOW TO CHARGE THE DEVICE

 - Before initial use, please check the condition of the device and components to ensure there's no damage to the main unit or power supply accessories.
- Fully charge the device as per the following instructions prior to initial use.
- Place the device on the charging base. Attach the USB cable to the power adapter and plug it in to the power outlet.
- Please use the photo on the right for guidance

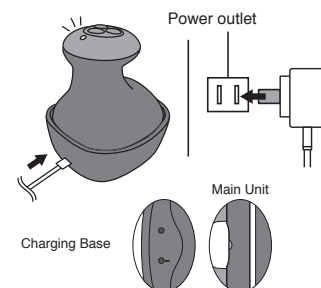



*A red light will show when charging, and will disappear once the device has been fully charged.

*Your device will be fully charged after around 2 hours.



Please do not unplug the cord by pulling the wire. It may lead to accidents. Hold the power adapter when unplugging.

  HOW TO TURN THE DEVICE ON/OFF & THE OPERATION CYCLE

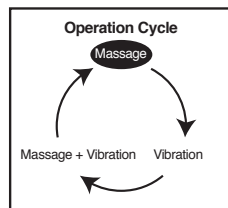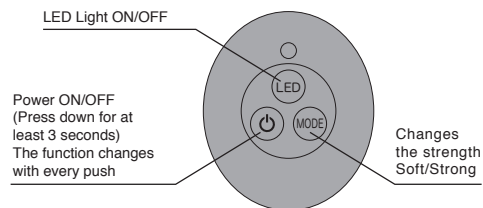

- When the device is turned ON, the massaging function will automatically begin
- The device will automatically turn OFF after 10 minutes of use

INSTRUCTIONS

Instructions for use as a shampoo brush:

1. Soak your hair with water, apply shampoo and lather to create bubbles.
2. Press and hold the power button for at least 3 seconds to turn the device ON.
3. Gently place the "heads" onto the area of your choosing, select the strength of movement and vibration, and turn the red LED light on.
4. Once finished, press and hold the power button for at least 3 seconds to turn the device OFF.
5. Rinse shampoo from your hair.



- Do not use water over 113°F. This may burn your skin and break the device.
- Do not press the device on to yourself too hard. It may cause harm to your skin & the device.
- Do not press onto the same place for longer than 5 seconds.
- Do not apply shampoo directly onto this device.
- Do not look at the LED light for a long period of time. It may be harmful to your eyes.

Instructions for use as a massager:

1. Use the device after cleaning the area to be massaged.
2. Press and hold the power button for at least 3 seconds to turn the device ON.
3. Place the device on the area of your choosing. You may use any lotion of your choice.
You can also change the strength of the massage and vibration.
4. Press and hold the power button for at least 3 seconds to turn the device OFF.



- Do not press too hard or use the device on one area for longer than 5 seconds. It may irritate your skin and or damage the device.
- Do not apply cream directly onto the device.
- Do not look at the LED light for a long period of time. It may be harmful to your eyes.
- Avoid excessive use to where it causes pain or severe discomfort.

DEVICE AFTERCARE

Aftercare

- Do not wash while plugged in to an electrical outlet.
1. Wash the device using room temperature water.
 2. Wipe away all water present on the device using soft cloth.
 3. Dry in a well ventilated place.
 4. Clean charge base with damp cloth and only if charge base is unplugged.



- Make sure to turn the device OFF before washing.
- Do not use water over 113°F.
- Do not use benzine or thinner on or when using this device.

Storage

1. Unplug the USB cable from the AC adapter, and leave the main unit on the charging base.
2. Store massager in its charging base in a cool (40°F and 105°F) and dry location and keep away from direct sunlight, corrosive gases and fire.
3. If the USB port or the "heads" get dirty, use soft cloth to clean them, and store in a well ventilated area.

- Do not tangle the USB cable. It may cause damage to the cable.

TROUBLESHOOTING

Charging lamp won't light up The device may be pushed too much/not enough into the charging unit.

The "head" is popped out. Part of the "head" doesn't move Each "head" functions individually. When you press the device too hard, "heads" may fall out. Push the "head" back in place.

Cannot turn the device ON/OFF Press and hold the power button for at least 3 seconds.

The charging lamp turns OFF When the device is fully charged, the lamp turns off after 20~30 seconds.

Weak Massage The device battery power is low. Recharge the device following the charging instructions.

*If none of the solutions above work, please contact Customer Service team on 01273 774 977

FOR SAFETY

⚠ Warnings

Please follow the instructions for your safety! It may cause severe injury or death.

- FOR EXTERNAL USE ONLY.
- DO NOT customise or rebuild this device.
It may cause electric shock, fire, and injure you. Contact the place of purchase if you have any questions.
- KEEP OUT OF REACH OF CHILDREN. This item is not suitable nor designed for use by unsupervised children. It may cause severe injuries.
- DO NOT USE:
 - On injured broken skin or sensitive areas. Do not use if you are suffering from dermatitis, severe sunburn, rashes, open wounds, eczema, swelling, and or other medical conditions of the scalp. Do not use on areas under medical treatment.
 - If you have sensitive skin.
 - If you feel extreme fatigue after eating/ drinking.
 - If a rash or irritation occurs.
- TURN THE DEVICE OFF immediately and seek medical help if you feel any sickness or pain.
- TURN THE DEVICE OFF immediately if you experience any discomfort during or after use, please discontinue use immediately and seek medical help.

⚠ Caution

Please follow the instructions for your safety as a failure to do so may cause injury or death.

- Do not drop or throw this device.
It may cause the device to break and cause electric shock, etc.
- Do not use this device for purposes different to those for which it was created.
It may cause injuries or the device to break.
- Do not press too hard or use the device on one area for longer than 5 seconds.
It may irritate the area, and may break the "heads".
- Do not forcefully stop the vibration and the movement of the "heads".
It may cause damage.
- Do not use any power adapters or other sources of power, other than that provided with the device.
Use only the power supply provided with the device.
- Do not use while walking or driving.